


### **Installation instructions for wooden countertops and kitchen islands**

For an optimal installation of wooden countertops and kitchen islands, it is imperative to follow these instructions:

- Do not stick the countertop and/or the block on its support (see image 1) ;
- Ensure that the counter and/or kitchen island support is level over its entire surface;
- Ensure that no heat source is located under the counter and/or the kitchen island (see image 2) ;
- Use only screws and washers ;
- Do not force the counter and / or the island between two fixed elements on the direction of its width (see image 3) ;
- Make the hole slightly larger than the screw holder (see image 4) ;
- If the counter and / or the block is changed on site, the changed parts will be finished again with the same finishing product.


Good installation!

Image 1

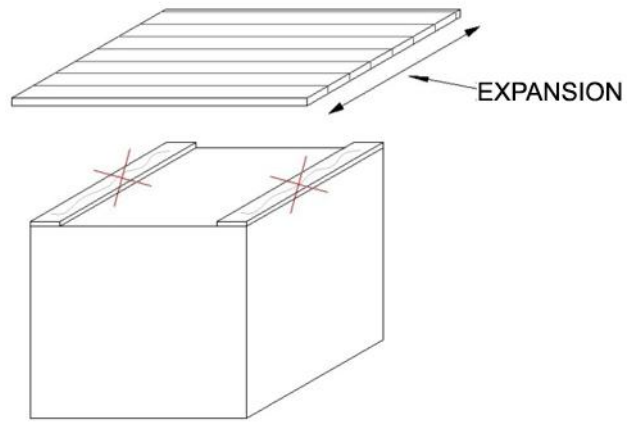


No glue.

Image 2

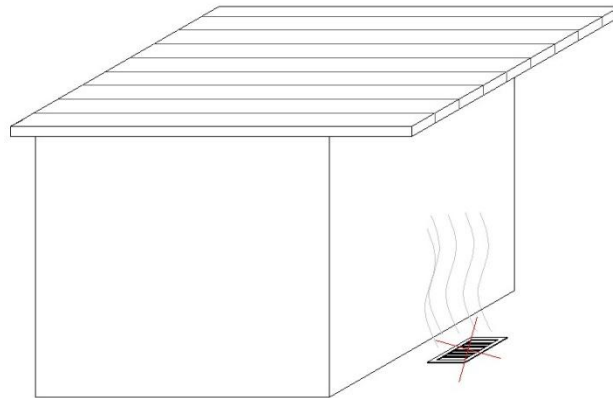

No heat source.

Image 3

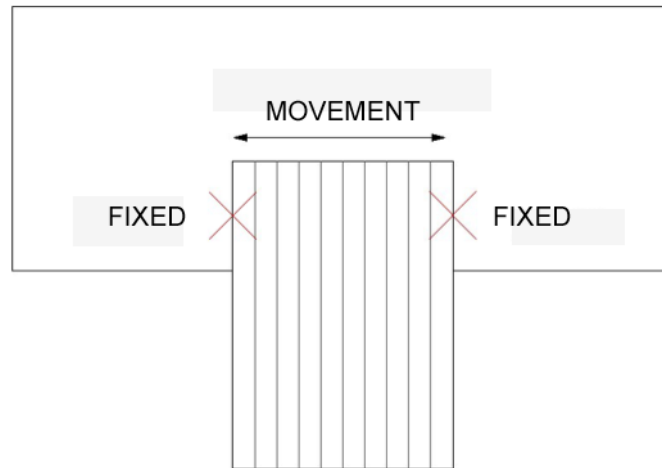

Leave room for expansion.

Image 4

